1. Description of remote control button function

Lamp ON
Scene Mode
Night light Mode
Brightness −
Color Temperature −

Brightness ⊖

Lamp Off Button
For Each Group

Lamp OFF
Timing Function
Energy Saving Function
Switch Between Warm Light/Neutral Light/Cold Light 3 Color Temperature
Color Temperature ⊕

Connect Button / Lamp On Button For Each Group

★And after you install the lamp,please note that to press and connection button on the remote control when you turn on lamp.
★Attention!You need to press button and press lamp switch at the same time! Wait for the light to flash three times.It means lamp and remote control is connected properly.

Licht Aufwachraume 182

2. Use steps:

Please note:The remote control must be connected to the lamp before it can be used

Operation method: After installing the lamp, turn on your line switch, and within 3 seconds, long press the upper part of "1" in the remote control, which is the "ON" button, to make the lamp flash 3 times, indicating that the lamp and the remote control are successfully completed Code connection.

★Attention!You need to press button and press lamp switch at the same time! Wait for the light to flash three times.It means lamp and remote control is connected properly.

One remote control controls multiple lamps:

If you want a remote control to control multiple lamps, and the brightness and color temperature of each lamp are the same, you only need to install the all lamps, turn on your line switch, and within 3 seconds, long press the upper part of "1" in the remote control, which is the "ON" button, to make the lamp flash 3 times, indicating that the lamp and the remote control are successfully completed Code connection.

3.Night light function

Find night ight button on the remote control, press afer the lights whether inwhat state, light work in Nightlight mode.

---
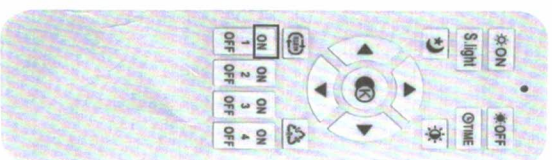
4. Three color temperature switching functions

Press the color key in the middle of the remote control, can choose the color. The lamp can switch to any one of the three color temperatures of warm white 3000K/neutrallight 4000K/cool white 6000K at the same time.

5.Timing function

Find the timing button on the remote control, Press once, the lights flash 1 time, said the timing for 30 minutes; Press twice, the lights flash 2 times, said the timing 60 minutes. Press button "ON" to open, disable the timer.

6.Scene mode function

Find the remote control on the scene key , after pressing , the side of the light is open , or auxilarylight open.

7.Memory function

The powersupoly using advanced automatic synchronization technology, lights on after 3 seconds, the power wil be automalically entered into the memory function, wall light switch electic broken, and then power on, now light memory on a turm off the lights before state

8.Energy saving function

Press the energy-saving key. light automaticaly enter the power saving mode, can save electricity 50%.

## Supplementary note:Group control

If you need to control each lamp in groups, and the brightness and color temperature control of each lamp do not affect each other and are different from each other, then you need to connect each lamp according to the group and code after each lamp is installed.

For example, after you install your first lamp, you need to immediately connect the code,turn on your line switch, and within 3 seconds, quickly press the upper part of "1", which is the black circle button, to make the lamp flash 3 times, which means The first group of lamps and remote control successfully completed the code connection. Then you install the second lamp, turn on your line switch after installation, and quickly press the upper part of the remote control "2", which is the black circle button to make the lamp flash 3 times, indicating that the second group of lamps and the remote control are successfully completed Code connection. And so on.

Once the lamps and the buttons of the remote control are successfully matched one by one, you will control the corresponding lamps through each corresponding group of buttons. (Note: Each lamp must be individually coded once after installation, and the same button cannot be used repeatedly to pair different lamps.)
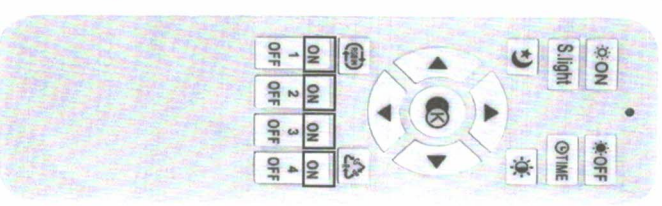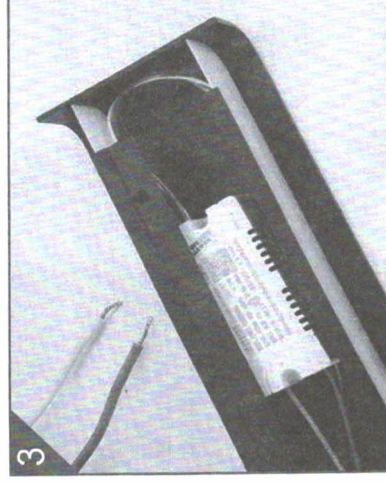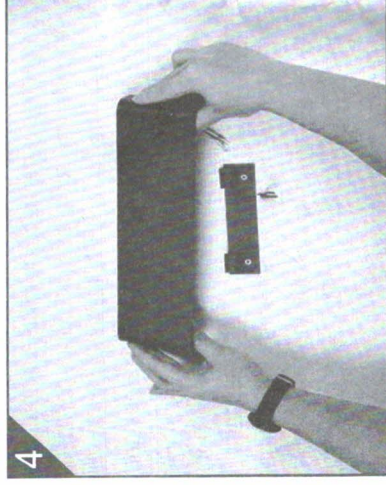
LAMP INSTALLATION INSTRUCTIONS
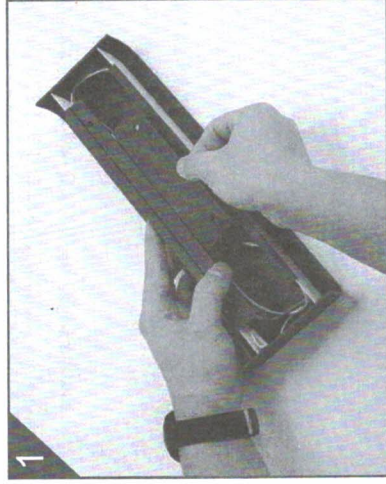
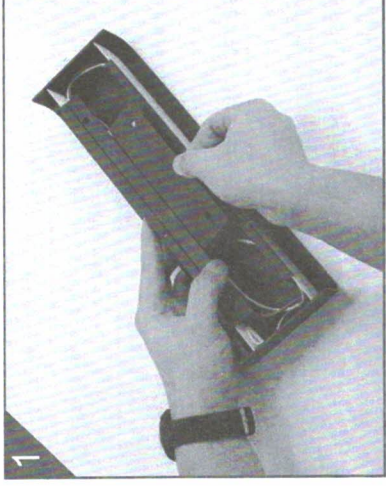1. Remove the base from the back with a screwdriver
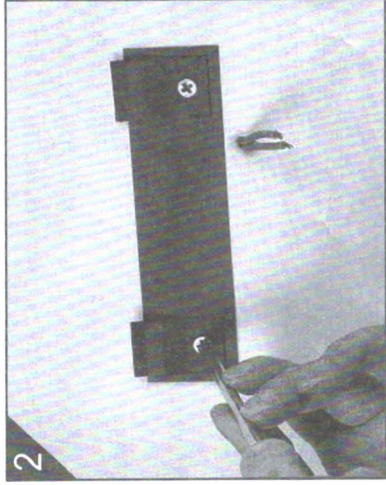
2. Use two screws to secure the lamp holder to the wall

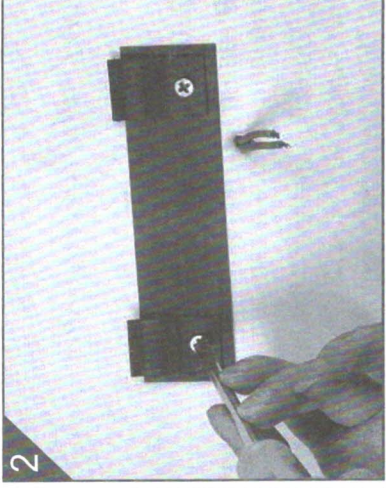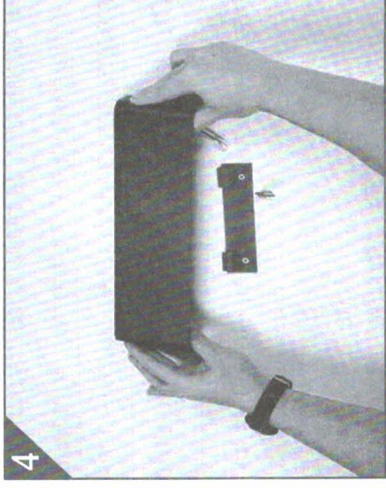3. Connect the correct wires to home circuit

4. Insert and secure the lamp into the lamp base